



FERRET REPEATER

Ferret Repeater Configuration Guide



Configuration is required to pair your Ferret Repeater with your Ferret Sweeps camera prior to use.

FERRET Repeater CFR300A

Version 2.1 © 2020

The Cable Ferret Company Limited
The Cable Ferret Company Pty Ltd
Cable Ferret, Inc.


Made in China

www.cableferret.com


Setting Up Your Ferret Repeater

Note: Configuration is required to pair your Ferret Repeater with your Ferret Sweeps camera prior to use.


1. Plug the Repeater into a power bank to power up. WiFi indicator LED will be green.
2. Open the WiFi Settings on your smartphone or tablet and select the “Ferret-Repeater-XXXX” SSID.

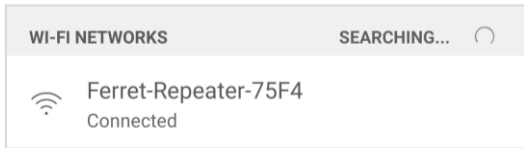

3. Once connected, open an internet browser on your smartphone or tablet and enter the address **10.10.10.254**. The Ferret Repeater Configuration Page will open up.

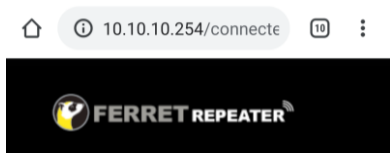

 
4. Switch on your Ferret Sweeps camera.
5. Scroll to the bottom of the page and tap SCAN NOW.




6. Find your Ferret camera's SSID "Ferret-WiFi-XXXX" and tap "Select". In this example, the Ferret camera's SSID is "Ferret-WiFi-DC21"



7. Tap "Next"

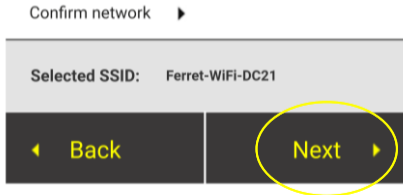

8. Tap "Confirm"

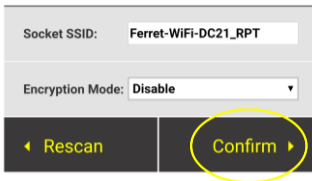

Socket SSID: Ferret-WiFi-DC21_RPT

Encryption Mode: Disable

◀ Rescan Confirm ▶

9. Wait for the "Configuration Successful" message.

Configuration Successful!

10. After approximately 30 seconds, the green WiFi Indication LED will turn Blue confirming your Ferret Repeater has been configured.

11. Go to the WiFi Settings on your phone, select the SSID “**Ferret-WiFi-XXXX_RPT** “. Check that you’re connecting to the SSID with “**RPT**” in the name (for the Ferret Repeater).

Ferret-WiFi-DC21_RPT in the example below.



12. Open your Ferret WiFi App. Your phone is now connected to your Ferret camera via the Ferret Repeater.

NOTE: The Ferret Repeater will only need to be reconfigured if you need it to connect to a different Ferret camera.

Specifications

Model: CFR300A

Dimensions: 85 x 25 x 9mm

Frequency: 2.4GHz

Signal Rate: Up to 300Mbps

Transmit Power: < 18dBm

Operating Voltage: 5V DC

Warranty

Your **FERRET Repeater** comes with a 12-month replacement warranty. In the unlikely event that your **FERRET Repeater** develops a fault within 12 months of purchase, please email support@cableferret.com or return it your place of purchase with proof of purchase.

Failure due to physical damage, misuse, neglect, improper use or moisture is not covered. **The Ferret Repeater has no user serviceable parts inside. Disassembly will void the warranty.**